

# Lenovo ThinkPad T15 Gen2

- description : Lenovo ThinkPad T15 Gen2
- author :
- email : shlim@repia.com
- lastupdate : 2022-11-17 Thu

## 1. Remove the bottom plate

To take this laptop apart, you have to undo **all 8 captive Phillips-head screws**. After that, pry the bottom panel with a plastic tool.

, 8 ,

Captive Screws are a specialist fastener that is retained within a target assembly or housing, typically with an unthreaded portion below the head, called a reduced shank.

The screw is captive meaning it can not be totally removed from the hole or fall out when items are disassembled.

가

(Housing) :

(bolt with reduced shank,

-

가

(延- , 伸- ) :

## Ref Link

[Inside Lenovo ThinkPad T15 Gen 2 - disassembly and upgrade options](#)

[ThinkPad T15 Gen2\(Intel\)](#)

, [Lenovo ThinkPad T15 Gen2](#)

Last update: 2022/11/17 09:35 wiki:miscellaneous:lenovo\_thinkpad\_t15\_gen2 http://125.132.25.164/dokuwiki/doku.php?id=wiki:miscellaneous:lenovo\_thinkpad\_t15\_gen2&rev=1668645322

---

From: <http://125.132.25.164/dokuwiki/> -

. - 2023.12



Permanent link: [http://125.132.25.164/dokuwiki/doku.php?id=wiki:miscellaneous:lenovo\\_thinkpad\\_t15\\_gen2&rev=1668645322](http://125.132.25.164/dokuwiki/doku.php?id=wiki:miscellaneous:lenovo_thinkpad_t15_gen2&rev=1668645322)

Last update: **2022/11/17 09:35**