

Lenovo ThinkPad T15 Gen2

- description : Lenovo ThinkPad T15 Gen2
 - author :
 - email : shlim@repia.com
 - lastupdate : 2022-11-17 Thu

1. , ()

2. Remove the bottom plate

To take this laptop apart, you have to undo **all 8 captive Phillips-head screws**.

After that, pry the bottom panel with a plastic tool.

, 8

Captive Screws are a specialist fastener that is retained within a target assembly or housing, typically with an unthreaded portion below the head, called a reduced shank.

The screw is captive meaning it can not be totally removed from the hole or fall out when items are disassembled.

가

(Housing) :

(bolt with reduced shank,

가

(延- , 伸-) :

Ref Link

Inside Lenovo ThinkPad T15 Gen 2 - disassembly and upgrade options

ThinkPad T15 Gen2(Intel)

Lenovo ThinkPad T15 Gen2

Last update: 2022/11/17 [wiki:miscellaneous:lenovo_thinkpad_t15_gen2](http://125.132.25.164/dokuwiki/doku.php?id=wiki:miscellaneous:lenovo_thinkpad_t15_gen2&rev=1668646176) http://125.132.25.164/dokuwiki/doku.php?id=wiki:miscellaneous:lenovo_thinkpad_t15_gen2&rev=1668646176
09:49

From: <http://125.132.25.164/dokuwiki/> -

. - 2023.12



Permanent link:

http://125.132.25.164/dokuwiki/doku.php?id=wiki:miscellaneous:lenovo_thinkpad_t15_gen2&rev=1668646176

Last update: **2022/11/17 09:49**